
Fulham Parcel Box 3008M / 3008L

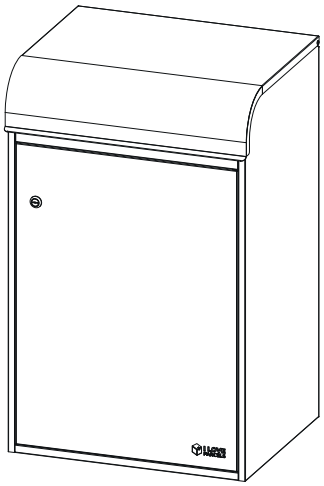

Tools required

Hammer drill


6mm masonry drill bit [OR] 3mm wood drill bit

Keep spare keys in a safe place


Blank keys are available for purchase on our website

Mounting onto a Brick Wall

1. Mark hole locations, drill four 6mm holes and insert wall plugs provided.

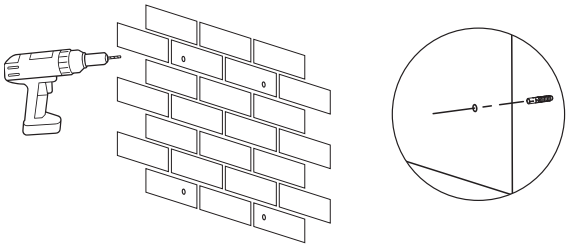


2. Mount the letterbox onto the brickwork with the washers and screws provided.

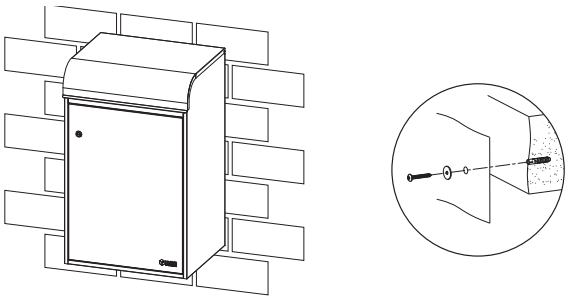

Mounting onto a Timber Fence

1. Mark hole locations and drill four 3mm holes.

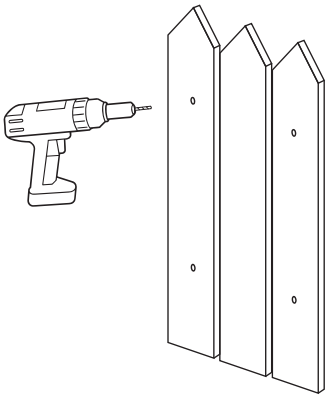

2. Mount letterbox to the fence with the screws provided.

